

EPSON INTERACTIVE WHITE BOARD USER GUIDE

The EPSON BrightLink Pro (1420Wi/1430Wi) is an interactive data projector found within many meeting rooms and learning areas at UQ. It features a number of **interactive whiteboard** tools which allow you to control connected devices and annotate presentation content.



POWERING ON THE EPSON IWB

The EPSON Interactive Whiteboard (EPSON IWB) is included in many audio visual systems at UQ. These audio visual systems are controlled by either a touch panel or button panel, though rooms with an EPSON IWB will also include an EPSON button panel. In order for the audio visual system to function correctly, it is important that you use the correct controller to power on the system.

Please identify the controllers in your room and follow the instructions to power on the AV system:

AMX Touch Panel and EPSON Button Panel

- On the AMX touch panel, select the **POWER ON** button option, then select the desired source input. The EPSON IWB will power on once a source input has been selected.
- **Do not** use the EPSON button panel to power on the AV system.



AMX Button Panel and EPSON Button Panel

- Push the **ON** button on the AMX button panel, wait for the buttons to stop flashing blue, then select a source input.
- If there is no ON button on the panel, select the source input you wish to use and the system will power on automatically. All buttons on the button panel will flash blue while the audio visual system is warming up.
- **Do not** use the EPSON button panel to power on the AV system.




EPSON Button Panel Only

- If your AV system does include an AMX touch panel or button panel as shown above, select the **Power** button at the top left of the EPSON button panel to power on the EPSON IWB.




USING THE INTERACTIVE WHITEBOARD

- Select the Whiteboard button option on the EPSON button panel. The display will turn white.
- Choose an interactive whiteboard marker from the storage container and power it on via the button on the side of the marker.
- Press the marker to display to begin using the whiteboard.

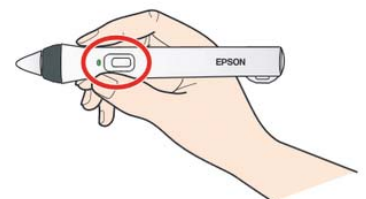

COMPUTER INTERACTIVE MODE

In some rooms, the EPSON IWB can be used to control computer mouse functions for the room's Desktop PC.

Swap from **PC Free Annotation Mode** to **Computer Interactive Mode** by selecting the Computer Interactive Mode icon () on the on-screen toolbar, then use the whiteboard marker as you would a computer mouse. Left click by tapping the marker on the display, and right click by holding the pen button as you tap on the display.

























USB STORAGE FUNCTIONS

To save a snapshot of the IWB display, connect a USB flash drive to the front USB-A port on the EPSON button panel, select the **Save** icon, enter a unique file name, choose a save location and format, then select **Save**.

To show a saved image on the IWB display, select the **Insert Image** icon, select a JPG, PNG, EWF, or PDF file, then select **Load**.


INTERACTIVE WHITEBOARD FUNCTIONS

An on-screen toolbar will appear once you begin writing. These toolbar options can be used to control most functions of the EPSON IWB.

- | | |
|--|--|
|  Switch to annotation mode |  Write or draw lines with custom pen |
|  Switch to whiteboard mode |  Change highlighter pen colour and width |
|  Undo the last annotation |  Write or draw lines with highlighter pen |
|  Redo the last undo |  Black pen (fine point on left, thick on right) |
|  Select all objects in a rectangular area |  Red pen (fine point on left, thick on right) |
|  Select all objects in a freehand area |  Blue pen (fine point on left, thick on right) |
|  Turn the pen into a draggable pointer |  Eraser (thin width on left, thick on right) |
|  Capture the selected area as an image |  Clear all content on page |
|  Insert an image from a USB flash drive |  Shows the pens' current colour and mode |
|  Insert a circle, square, triangle... |  Hide the toolbar after each annotation |
|  Change custom pen colour and width |  Hide the toolbar |
|  Switch to Computer Interactive Mode |  Switch to PC Free Annotation Mode |

INTERACTIVE WHITEBOARD BUTTON PANEL FUNCTIONS

1. Turn the EPSON IWB on or off. **Do not** use this button if your audio visual system includes an AMX button panel or AMX touch panel.
2. Capture the currently projected image.
3. USB-B port for connecting your laptop to the EPSON IWB.
4. Selects Whiteboard Mode. This button will also power on the IWB if it is powered off.
5. Select from the available source inputs. **Do not** use this button to change source inputs if your audio visual system is controlled via an AMX button panel or AMX touch panel.
6. Save the currently projected image.
7. The print function is **not available at UQ**.
8. Connect a USB flash drive to the EPSON IWB.

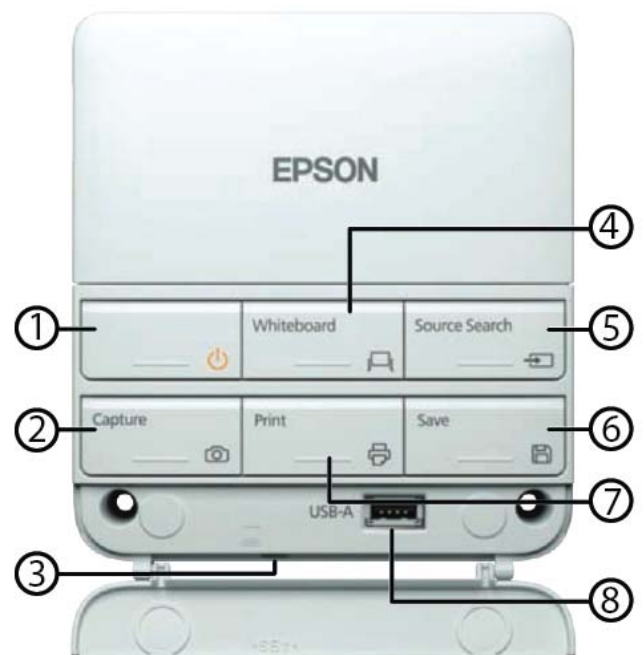

NEED HELP?

Email: itsupportdesk@its.uq.edu.au

ST LUCIA

Ph: 07 336 (54033)
7am - 9pm weekdays during semester
7am - 5pm weekdays out of semester

GATTON

Ph: 07 546 01181
Ext: 50181
8am - 4pm Weekdays

HERSTON

Ph: 07 336 (64871)
7am - 3pm weekdays

TRI & PACE

Ph: 07 334 (61924)
7am - 3pm weekdays